28 January, 2015, www.brodit.com, © 2015 Brodit AB

Product 854785

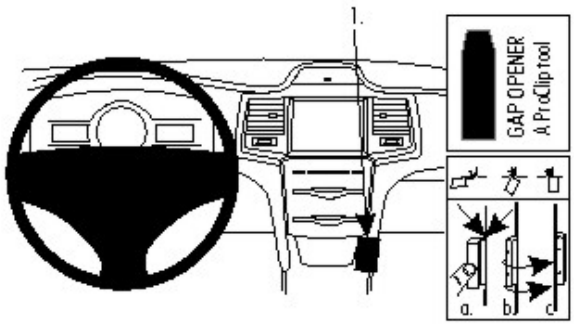

854785 ProClip

Angled mount

The ProClip is a mounting bracket for the vehicle's dashboard. Onto the ProClip you can install e.g. a holder for your mobile phone or PDA or a handsfree set etc. Safe and convenient -always within easy reach. The ProClip is car specific and easy to install. The installation is quick, no special tools or dismantle of the dashboard is required and it will not damage the interior of the vehicle. Made in black ABS plastic. Comes with detailed instructions.

EAN: 7320288547855

Item no 854785 fits:
Lincoln MKS 13-15 (For USA)

INSTALLATION INSTRUCTIONS

1.

2.

3.

4.

Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts: Part 1: The attaching part (the smallest part). Part 2: The ProClip faceplate.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the center console panel and the console edge, to widen the gap. Peel off the cover of adhesive tape on the Part 1. Place the thin edge of Part 1 against the gap below the gap opener in the exact same position and height as in the picture.

2. Press the thin edge into the gap and at the same time: press Part 1 to the right until you see or hear/feel it click into place. Pull out the gap opener.

3. Press a screwdriver (Philips) through the predrilled holes in Part 2 to open the holes. Peel off the cover of the adhesive tape on Part 2. Place Part 2 onto Part 1 so the holes match and the adhesive tape on Part 2 is on the left side. Screw Part 2 onto Part 1 using the enclosed screws. Right before you tighten the screws press the ProClip to the right and press the adhesive tape on Part 2 to the center panel. Hold the ProClip in that position and tighten the screws.

4. The ProClip is in place.